


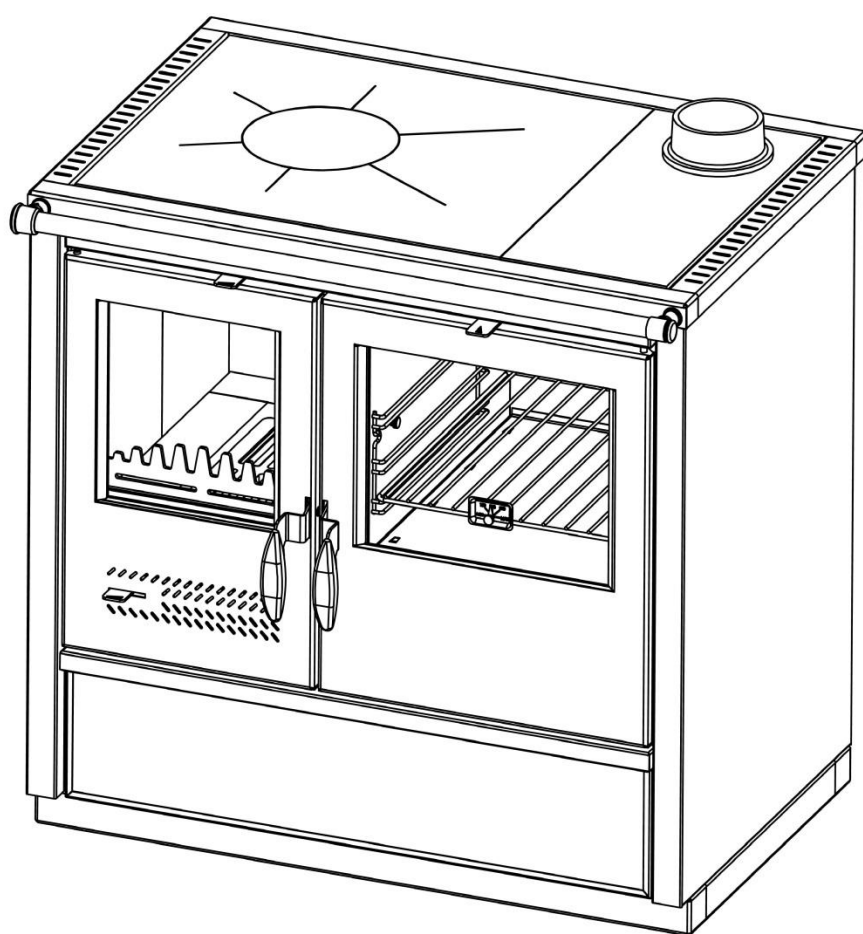

NORTH

Owners's manual

INSTALATION, ADJUSTMENT AND OPERATING INSTRUCTION



EN 12815

Dear Customer,

We appreciate your trust vested in us and decision to use "TIM SISTEM" product.

You have invested in energy-efficient and high-quality product - NORTH wood burning cooker.

Your purchase will provide you long-term clean and comfortable heating with minimal maintenance.

Please read these instructions carefully and completely.

Its purpose is to inform you about the installation, operation and maintenance of your stove. Keep it handy and refer to it as needed. You will find in it information that will be useful now and in the years to come.

Make sure that when installing the stove all security standards have been respected and that all gas pipes, connections between tubes and pipes and walls are connected properly.

Failure to comply with these standards and carelessness during installation can result in damage to property or put your health and life in danger!

Set your cooker to a safe place, away from the frequent passages and doors, somewhere near chimney and chimney connection.

We wish you many pleasant moments with NORTH.

TIM SISTEM d.o.o.

WARNING BEFORE USE

To keep your cooker working properly, it is important to read this manual and strictly stick to the instructions for use and handling.

For combustion use solid fuels such as wood and wood briquettes. It is forbidden putting explosive devices and materials combustion chamber or the limited thermal furnace. It is forbidden to keep flammable materials near the stove.

For proper combustion, in normal operating mode, draft in the chimney should be 10-12PA. If the draft is greater than 15Pa, the valve should be installed in the chimney.

Room where the cooker is positioned must be vented regularly for the fresh air needed for combustion.

Some parts of cooker heat up during operation and it takes appropriate precaution when handling it. Do not allow children to handle and play near the cooker.

Only spare partes reccomended and allowed by the manufacturershould be installed on the cooker. You must not make any changes on the cooker.

With first firing there might show a mild smoke, especially from the plate's surface. It is a common appearance that occurs due to combustion deposits on the plate's surface(corrosion protection, paint, dust,). The room where the cooker is should be vented during the first firing.

It's not reccomended connecting the cooker to the common chimney because it can adversely affect the required draft.

Device that uses gas as fuel must notbe connected to same chimney.

During firing, use protection gloves because the door handles get heated.

National and local regulations for the installation of the furnace must be respected.

In a case of non-copliance with instructions given in this manual, manufacturer does not take any kind of responsability for caused damage.

DESCRIPTION OF THE COOKER

NORTH wood burning cooker is used for heating rooms and it's manufactured and tested according to European standard EN 12815.

The upper plate of the fireplace is made of steal.

Firebox doors are made of steal with fireproof glass.


Connection for smoke drainis being put on the plate and connected with screws.

All the materials that NORTH cooker is made can be recycled.

Sealing elements are made of materials that NOT contain asbestos.

Parts of the COOKER:

- | | |
|----------------------|---------------------------------------|
| 1. Protection rail | 9. Drawer for NOT-flammable materials |
| 2. Hotplate | 10. Firebox door handle |
| 3. Smoke exhaust | 11. Primary air regulator |
| 4. Flue gas register | 12. Firebox door |
| 5. Thermometer | 13. Firebox |
| 6. Oven | 14. Secondary air regulator |
| 7. Oven door | |
| 8. Oven door handle | |

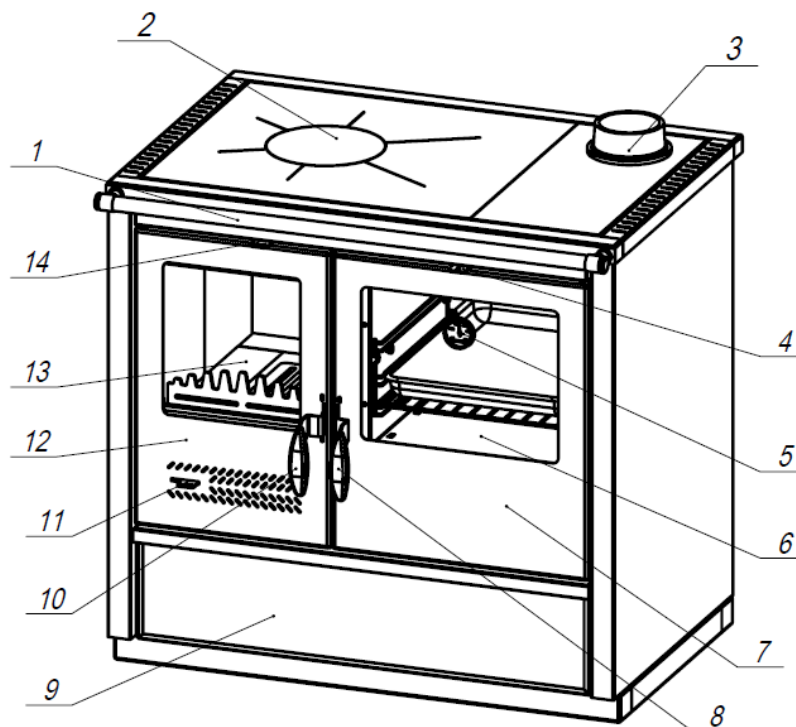

TECHNICAL DATA

Name		NORTH
Use		Solid fuel cooker
Nominal power	kW	9,38
efficiency	%	84,74
Fuel		Wood, wood briquets
Dimensions of the cooker WxLxH	mm	900x600x850
Dimensions of the fire place WxLxH	mm	290x450x270
Dimensions of the oven WxLxH	mm	350x475x295
Weight	kg	113
Minimum distance from flammable materials		
Back	mm	400
Side	mm	300
Front	mm	800
Content CO (reduced on 13% O ₂) [%]	%	0,091
Chimney connection	mm	Ø120
Chimney connection position		Left/right upper plate
Consumption by nominal power	kg/h	1,5
Emission temperature	°C	239
Air regulation		Primary
		Secondary
		Tertiary
Required draft	Pa	12±2

INSTALLING THE COOKER

Cooker must not be set up near the wooden parts, refrigeration parts, plastic furniture and other flammable materials because during operation (during fuel combustion) it achieves high operating temperature that is distributed on the outside of the furnace. Minimum distance between the stove and the surrounding elements is 50 cm, and the from flamable materials 80 cm.

If the ground on which you set the cooker is made of easily flammable material (wood, warm floor, laminate ...) you need to set under the cooker a protetion sheet metal - lateral width of 10 cm and 50 cm in the front.

Because of it's weight, the cooker must be installed on the appropriate base. If it does not satisfie necessary standard, you must take appropriate measures to make it possible (eg, weight distribution).

Connect the cooker to a chimney and flue pipes through the connector on top of the furnace, so as to ensure adequate tightness and flow of smoke from the stove to the chimney. Flue pipe must not be drawn too deeply into the chimney that would reduce the cross sectional area and thus undermined draft in the chimney. Do not use reducers which reduce the cross section of pipe smoke.

NORTH cooker requires insertion of fresh air in the room where it is installed, with surface openings for insertion of fresh air should not be less than 0.4 dm^2 . The unit for fresh air set outside the common room for ventilation, which must be insured by door and grille.

Fans that work in the same room where the cooker is installed may make interference wit the the cooker. Also, all devices or ventilation that creates negative pressure in the room where the cooker is installed, must be set in the way that does not make decompression that prevents normal operation of the furnace.

Before installing the cooker, check the chimney drafts because it is a key factor in the proper functioning of the cooker. Draft depends on the proper oporation of the chimney and meteorological conditions. One of the easiest ways to check the draft in the chimney is with a candle flame, as shown in Figure 2 . Put a candle near the chimney connection drain. If the flame bends towards drain, the draft is satisfying (Figure 2b). If the flame doesn't bend or bends a little, that indicates poor draft(Figure 2a).

If there is poor draft in the chimney (Figure 2a), check the chimney operation. The chimney should be located inside the building, and if it's located on the external walls of the building, it's recommended insulation chimney.

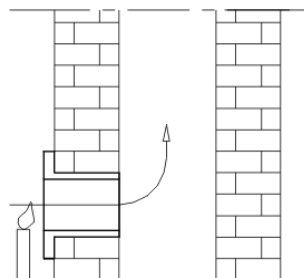


Figure 2a.

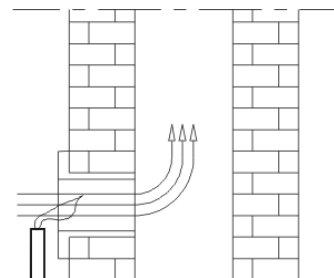


Figure 2b.

Disadvantages of the chimney (Figure 3):`

1. The chimney is higher than the top of the roof, a small cross section of the output,
2. Excessive slope
3. A sudden change of direction of the flue channel
4. Stove or some other device connected to the same flue channel,
5. Bulges in the flue channel
6. Cracks
7. Alien body or accumulated grime,
8. Tube inserted too deeply,
9. Fan or other device that creates a vacuum in the room
10. Unsealed or opened cleaning hole

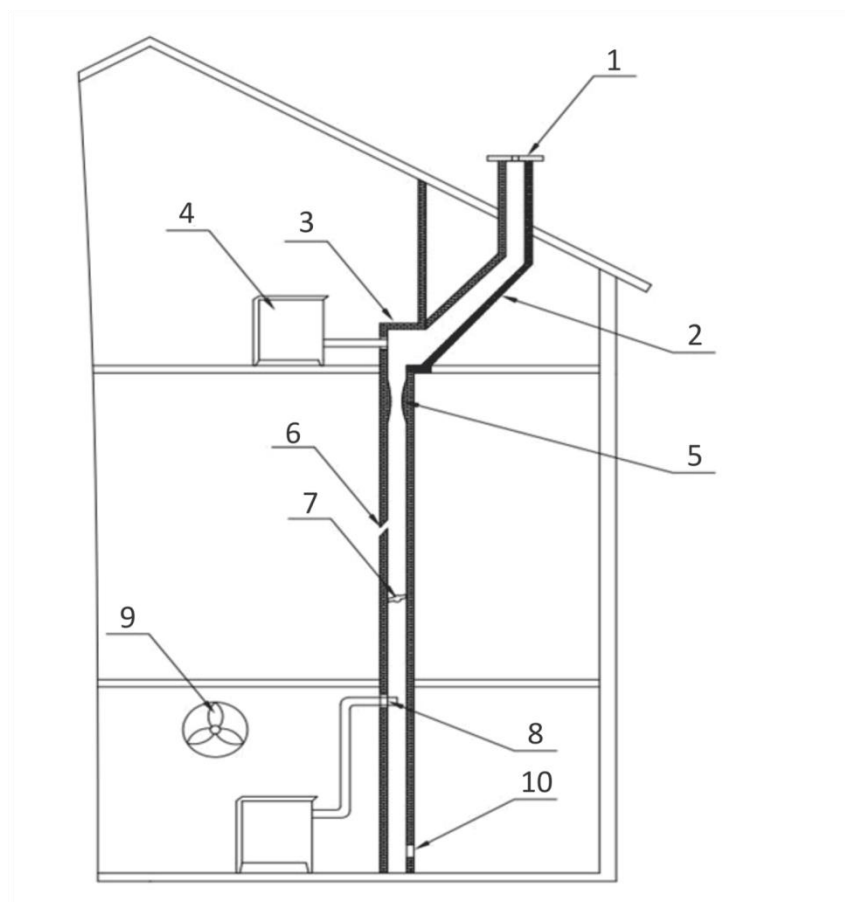


Figure 3.

IGNITION AND LIGHTING

Before the first firing, wipe all painted surfaces with clean and dry cloth, in order to avoid burning impurity on the oven and creation of unpleasant smells.

Start the fire in the stove by following order:

- open the fire door,
- place the fuel into the fire place (chopped wood to non greasy wrinkled paper)
- light a fire
- leave open primary air regulator until the flame gets stable and after having stabilized the flame, control burning intensity with draft regulator (Fig. 1, pos. 11)
- secondary air regulator leave opened until the flame gets stable and after having stabilized the flame, control burning intensity with regulator (Fig. 1, pos. 14)
- close the firebox door,
- after creating a basic flame insert larger pieces of wood or briquettes in the firebox, and close the firebox door. If you use briquettes as a fuel, you must wait that all briquettes are lit and then reduce the draft in half.
- when adding fuel, (Fig. 1, pos. 12) open the fire door step by step wait for 4-5 seconds, and then slowly open it wide.

Do not open the doors suddenly, when there's a strong flame in the combustion chamber, it may come to it's spreading into the room.

Regulating the draft in the cooker, you can regulate temperature, power and the combustion of fuel, and this is done by running draft regulator on the firebox door (Fig. 1, pos. 11). Combining primary air through the regulator on the firebox door and secondary air over the leverage above the firebox door (Fig. 1, pos. 14) you get desired combustion .

NORTH cooker contains auxiliary tools in order to facilitate its maintenance.

Recommended fuels are briquettes and wood.

You must not use gasoline and similar fuels, because by using liquid fuels you create conditions for damaging the stove and to provoke an explosion.

Attention!

- Do not use organic waste as fuel, food residue, plastic, combustible or explosive materials, which combustion disturbs the proper functioning of the cooker and may cause damage and environmental pollution.
- Increased ambient temperature can cause poor air circulation (drafts) in the chimney, and in that case is recommended more frequent firing in smaller quantities.
- Avoid using the cooker when there are bad weather conditions for the cooker and in the case of strong wind, because it reflects the required vacuum in the chimney. In these cases there may occur potential return of smoke in the room where the cooker is placed. Ignition is difficult then.

We recommend firing every hour with the amount of fuel in the combustion chamber up to 15cm with cross stacking wood for better airflow.

After each refilling, it's recommended to leave the oven running in full speed for 30 minutes, in order to destroy all volatile elements that may cause condensation in the cooker.

For correct cooker operation it takes:

- Regular cleaning of the cooker and chimney
- Regular room ventilation for better combustion
- Regular ash tray cleaning
- Accumulated slag and unburned material regularly remove from the grid

WORKING REGIMES

There are four working regimes, which could be selected by adjusting the draught in the cooker.

Combined working regime - working regime in which it could be cooked in the oven, cooked on the top of the hotplate and heat the room at the same time. It is necessary to push the flue gas register handle towards the inside of the cooker, move primary air regulator to create medium inlet of the air.

Quick cooking - during this process it is the hotplate heats up intensively and to be able to do that with small quantity of fuel, draw flue gas register handle completely outside, oven door should be shut and move primary air regulator to create medium inlet of the air.

Heating for this regime it would be recommended to use wood or coal. If the coal is been used it would require more frequent firing in order to create the ember which would intensively heat the hotplate of the cooker. Push the flue gas register handle towards the inside of the cooker, move primary air regulator to create medium inlet of the air and the oven's door closed.

Baking for this regime push the flue gas register handle towards the inside of the cooker, move primary air regulator to create medium inlet of the air and the oven's door closed after putting the baking pan inside.

HANDLING THE COOKER OPERATION

Start a fire with a moderate flame in order to avoid thermal shocks.

The following amounts of wood are inserted only after the previous volume burn.

Do not allow that ashes and unburned accumulate on the grid and to a pit that way. Clean the grid.

Open the door slowly and carefully, allowing that way equalization of pressure in the firebox and in the room, otherwise it might cause the smoke in the room.

The cooker is designed and intended for use with firebox door constantly closed, except during refueling. Do not open the door with no need.

The wood must be a maximum of 20% moisture content for maximum fire effect. Otherwise the tar gets separated which with water steam may create creosote. If that happens in some bigger quantity, it may lead to a chimney fire. You will most easily recognize chimney fire by: the characteristic sound that comes out of the chimney like loud roaring, visible flames coming out of the chimney, high ambient temperatures of surrounding walls and the characteristic smell of burning.

If there comes to the fire do the following:

- Immediately call the fire squad
- muffle oxygen supply to the chimney and turn off the cooker
- Do not insert anything into the chimney and make sure that the fire does not spread to the wooden construction or other combustible materials in its nearby.
- DO NOT pour water into the cooker or chimney
- A fire in the chimney can be extinct only with dry powder
- Water can extinguish only a surrounding material
- Do not cool the surrounding walls with water

Note:

If the fire in the cooker for some reason becomes dangerously strong take the following measures: close air dampers that provide air for combustion. If it is necessary put in the firebox specially prepared sand for this purpose or non-combustible fire blanket. It would be good to have a fire extinguisher.

Before the second charging, clean the grid in order to provide the fresh air.

Regularly clean the ash pan making sure that there is always a place for ashes.

The furnace is designed to operate in periodic mode. To maintain the required nominal power, combustion chamber is periodically filled with prestabled amount of fuel.

Furnace is not designed to operate in continuous mode of heating or in accumulating temperature mode.

CLEANING AND MAINTENANCE

Regular and proper cleaning allows proper operation and long life of the stove. All cleaning the interior or exterior surfaces are always performed in a cold oven.

Cleaning exterior surfaces - is done with a soft cloth that will not damage the surface of the stove. Cleaners of chemical origin can damage the surface of the fire place and cannot be used. Painted surfaces must not be cleaned with abrasive products.

Cleaning inter surfaces –when cleaning use protective gloves.

Clean the bottom of the oven from accumulated ash and pick up small unburned pieces of the grid, clean the ashtray and ash accumulated in the interior of the fireplace.

Cleaning glass surfaces - glass on the firebox may get dirty during the operation.. For cleaning use a mild detergent. Do not use abrasive cleaners because they can damage the surface of the glass. Clean the glass only when cool.

Cleaning and maintenance of the chimney - chimney cleaning and control is recommended at least once a year and after a long downtime. Regular maintenance and control of the chimney will prevent the occurrence of fire and poor operation of the stove.

Malfunction. Recommendations for its elimination

The following table shows the most common defects and recommendations for their removal.

Table: Showing the most common malfunctions, possible causes and ways of eliminating it.

Malfunction	Possible cause	Howe to remove it
Oven heats poorly	improper handling, Poor uptake	Read carefully and follow the instructions. Inthe case that despite all instructions have been respected, malfunctions are still not removed, call the customer service
Difficulties in lighting fire	Closed regulator of air supply, Wet wood, Lack of oxygene	Open the regulator of air supplyand provide a supply of a primary air Use a dry wood Ventilate a room in order to provide a supply of fresh air
Smoke reenters into a room	Closed regulator of air supply, Insufficient draft, Remainings of ashes on a grid	Open the regulator of air supplyand provide a supply of a primary air Read carefully the instructions and apply advices how to provide a draft Clean the grid
Glass on a firebox door are getting sooty for a while	Wet wood Too much fuel Insufficient draft Closed intake of secondary air	Use a dry wood Check a suggested quantity of a fuel provided in a user's manual Check a connection with a chimney Read carefully the instructions and apply advices how to provide secondary air

GENERAL RECOMMENDATION

If you have followed all the recommendations for installation, operation and control of cleaning, given in this manual, the stove is now tested, safe device for household use.

Before installing the stove, remove the package. Be aware of potential injuries because the wooden slats are connected with nails. Dispose a plastic bag in accordance with the regulations. Old stove you do not want to use anymore, dispose to designated areas in accordance with the regulations.

All complaints, perceived failure or malfunctioning stoves, should be reported to the factory or authorized service center by telephone or in written, only with fiscal receipt. All contact information provided at the end of this guide.

Any malfunction of the cooker, must be removed by the manufacturer's service only.

If unauthorized persons carry out any servicing or repairs and alterations to the stove, the owner loses the right to the manufacturer's warranty.

Supply of spare parts has to be done via manufacturer's service, based on the position and image of this manual.

The manufacturer does not assume any responsibility if the buyer fails to comply with the instructions for use and installation of the stove.

ADVISES FOR ENVIRONMENT PROTECTION

PACKAGING

Packaging material is 100% recyclable.

For a waste disposal of, act in accordance with local regulations.

Packaging material (plastic bags, polystyrene parts-polystyrene, etc.). Should be kept away from children, as a potential source of danger.

Take care of safe removing and disposing of wooden boards because they are connected with nails.


PRODUCT

The device is made of materials that can be recycled. When disposing the waste, act in accordance with environmental laws in effect.

Use only the recommended fuel.

It is forbidden burning an inorganic and organic materials (plastics, plywood, textile, oiled wood, etc.), because the combustion releases carcinogenic materials and other toxics.




SOLID FUEL COOKER "NORTH"

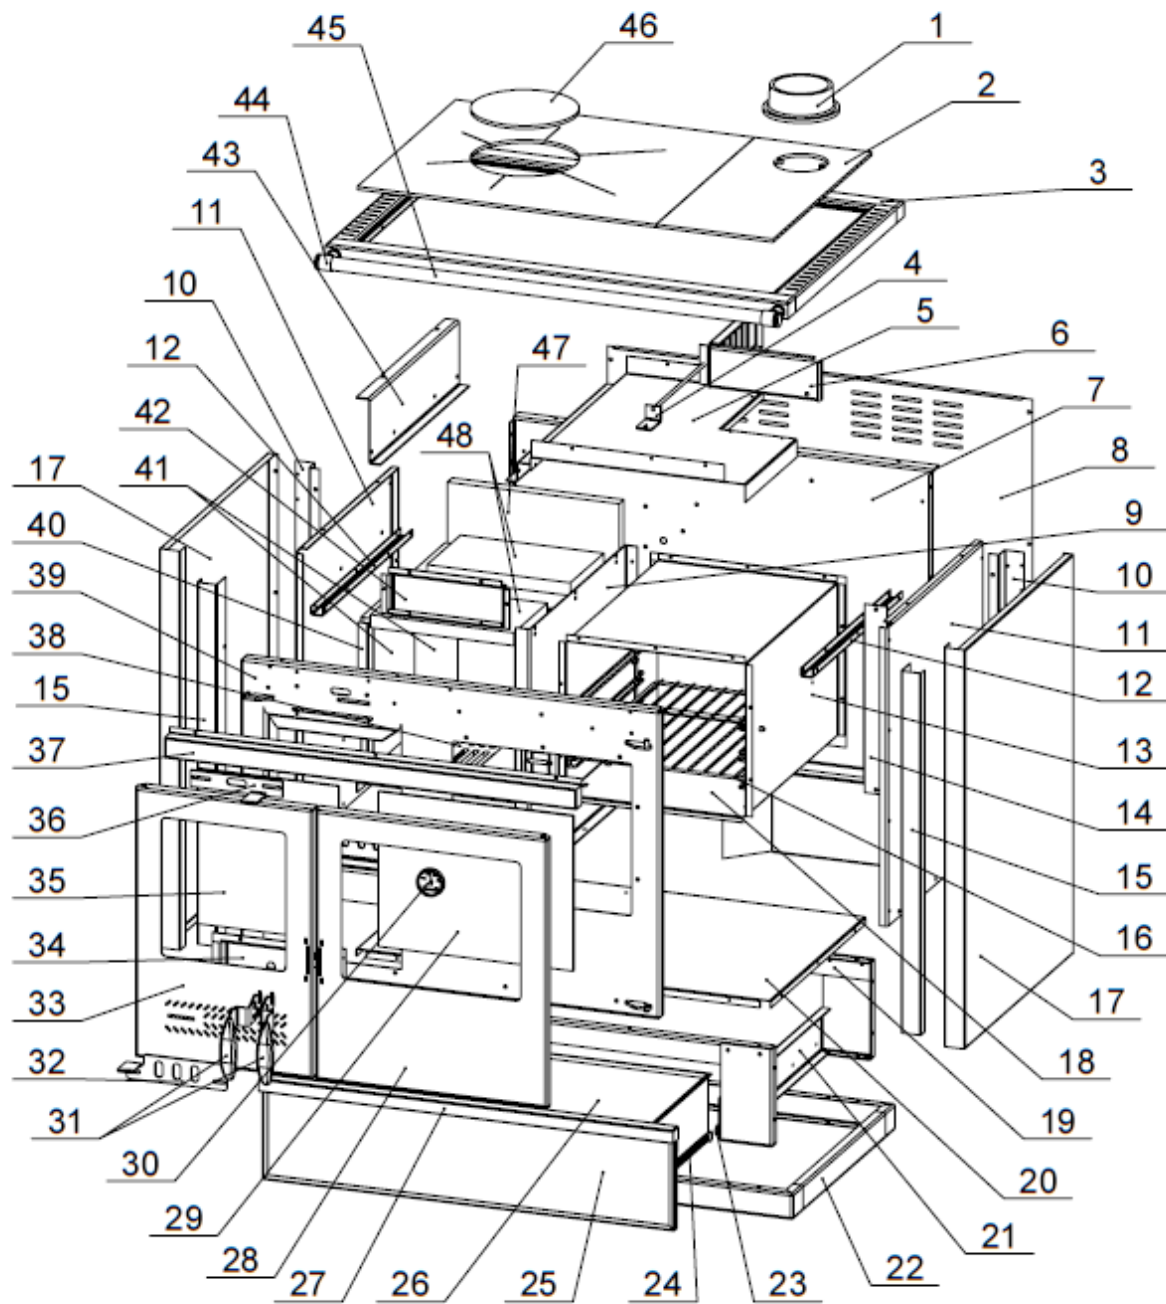

List of all Positions on the "NORTH" cooker

1. Smoke exhaust
2. Hotplate carrier
3. Cookers frame
4. Flue gas register handle
5. Oven protector
6. Flue gas register
7. Rear inner panel
8. Rear exterior panel
9. Partition firebox panel
10. Rear carrier side panel
11. Inner side plate
12. Carrier side brick
13. Assembly oven
14. Deflector below the oven
15. Front carrier side panel
16. Oven grill
17. Side panel
18. Bottom of the oven
19. Corps carrier
20. Bottom plate
21. Mount drawer slide
22. Base assembly
23. Stationary slider
24. Moving slider
25. Decorative drawers mask
26. Drawer for NOT-flammable materials assembly
27. Drawer for NOT-flammable materials handle
28. Oven door
29. Oven door glass
30. Thermometer
31. Doors handle
32. Primary air regulator
33. Firebox door
34. Primary air box
35. Firebox door glass
36. Secondary air regulator
37. Decorative plate
38. Grill
39. Front plate assembly
40. Front plate protector
41. Side brick
42. Secondary air box
43. Side panel protector
44. Protection rail carrier
45. Protection rail
46. Hotplate
47. Back brick
48. Uper brick

DIMENSIONS OF THE COOKER

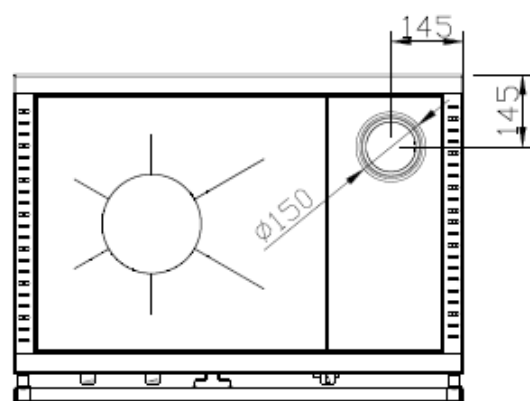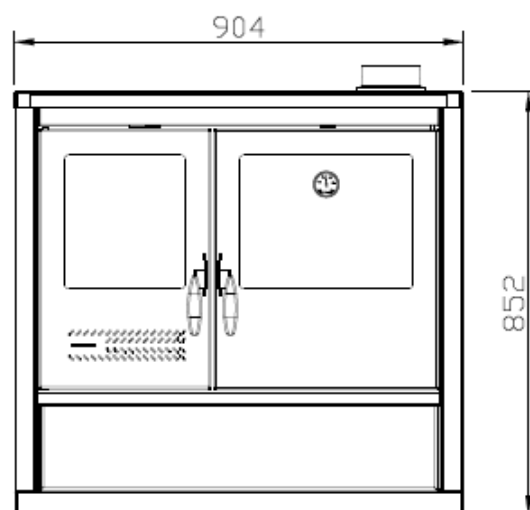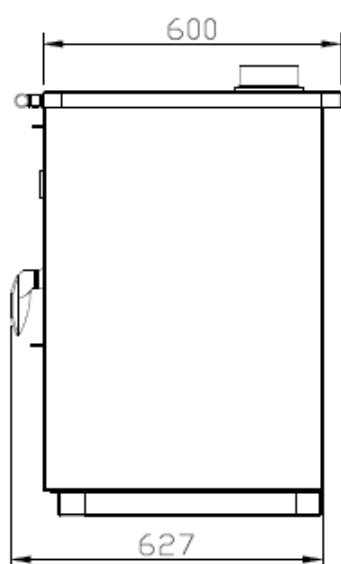

TIM SISTEM d.o.o.

Prva industrijska 9
22330 Nova Pazova, Srbija
Tel: +381 22 328 076
e-mail: office@timsistem.rs
web: www.timsistem.rs